

# AX-RHT-SDx

Room RH & T Transmitter with Display

# AXIO



## Product overview

The AX-RHT-SDx is a range of Room Relative Humidity & Temperature transmitters combined with an LCD display. The analogue outputs are selectable for current or voltage. The units are extremely reliable, have excellent stability and a quick response time.

Options for this range of sensors include the addition of various passive temperature sensors for most BMS systems.

## Features

- 2.5% Accuracy
- 2 Line LCD display
- 0-5/10Vdc and 4-20mA selectable output
- Optional thermistor output for temperature

## Product specifications

Accuracy	RH : $\pm 2.5\%$ typical (20 to 80% RH), Temperature : $\pm 0.3^\circ\text{C}$ typical
Sensor Type / Protection	Capacitive / PTFE filter
Long Term Stability	$\pm 1\%$ RH at 50% RH in 5 years
Repeatability / Hysteresis	$\pm 0.5\%$ RH / $\pm 1\%$ of span max
Response Time	15 seconds @ $25^\circ\text{C}$ , but dependant on airflow
Supply Voltage	24Vac/dc ( $\pm 15\%$ ) (24Vdc only with 4-20mA output selected)
Output (Voltage)	0-10Vdc, 0-5Vdc at 10mA maximum load
Output (Current)	4-20mA at 500 Ohms maximum load (use on 24Vdc supply only)
Output Range - RH	0 to 100% RH
Output Range - Temperature	$-10^\circ\text{C}$ to $+40^\circ\text{C}$
Display	3 digit, 2 line to display RH and Temperature
Terminals	Rising clamp 0.5-2.5mm <sup>2</sup> cable
Ambient Temperature Range	$-10^\circ\text{C}$ to $50^\circ\text{C}$ , 0-95% RH
Dimensions, Weight & Ingress	87 x 82 x 27mm, 75g, IP20
Country of Origin	United Kingdom

## Order codes

AX-RHT-SD	Room RH & T Transmitter with Display - 2 x analogue outputs, 2.5%
-x	Additional passive thermistor output. See beneath for options

## Sensor type selection

Replace part number suffix (-x) with one of the below thermistor types. Eg -T for Trend.

T	10K3A1 Trend	N1K	Ni1000a Siemens
3K	3K3A1 Alerton	100	PT100a Serek
A	10K4A1 York, Andover	1K	PT1000a Cylon
H	10K6A1 Honeywell	2.2K	2.2K Johnsons
D	30K3A1 Drayton	SAT	Satchwell
50K	50K6 Priva	TAC	1K87A1 TAC

© Copyright Annicom 2017. All Rights Reserved

### Installation

The AX-RHT range of sensors should be installed by suitably qualified technician in conjunction with any guidelines for the equipment it is to be connected to and any local regulations. Field wiring should be installed to satisfy the requirements set out by the manufacturer of the equipment that the sensor is being connected to. Anti-static precautions must be observed when handling these transmitters. The PCB contains circuitry that can be damaged by static discharge.

The transmitter board should not be mounted where temperatures will exceed the ambient temperature range specified.

Allow 3 minutes after applying power before checking functionality, and allow a further 30 minutes before carrying out pre-commissioning checks.

Chemical vapours at high concentration in combination with long exposure times will offset the sensor reading. This includes transportation before installation.

### Connections

Connections should be made using 0.5 to 2.5mm<sup>2</sup> cable. A minimum of four wires are required (power, 0V supply Common, RH output, Temperature output) for all operations. The use of shielded cable is optional but recommended for the highest noise immunity. Do not route signal wires in the same conduit with power cables as signal degradation may occur.

Before applying power, ensure that the transmitter output is configured correctly for the unit being supplied. If using 0-10V or 0-5V output modes ensure that the load is of a suitably high impedance. If using 4-20mA output mode ensure the load has less than 500 Ohm impedance.

### Setup

Remove power to the transmitter before changing between voltage and current output signal type. Use caution when changing jumper positions so as not to damage the circuit board, any components or the sensing elements. The unit is factory set for current output. To change the output signal to voltage move the 2-position jumper from 'I' position to the 'V' position. Place the 3-position jumper in the correct position for the required span (4-20mA, 0-10V or 0-5V).

#### All units:

Ensure that the supply voltage is within the specified tolerances.

### Operation

In normal operation the top line of the display will show the relative humidity level as a percentage. The bottom line will show the temperature in °C.

If the display shows 'Inh' check the jumper and supply voltage settings. Note that current output is only permitted with 24Vdc supply.



If the display show 'Err' then the sensor is faulty.

# AX-RHT-SDx



Room RH & T Transmitter with Display



## Connections and setup

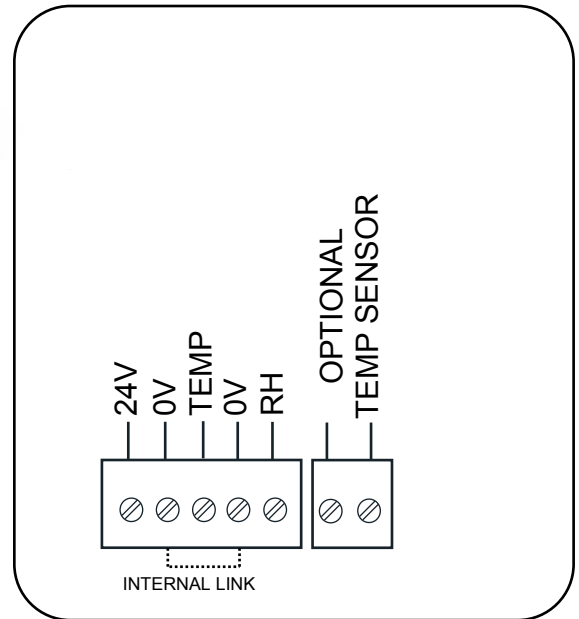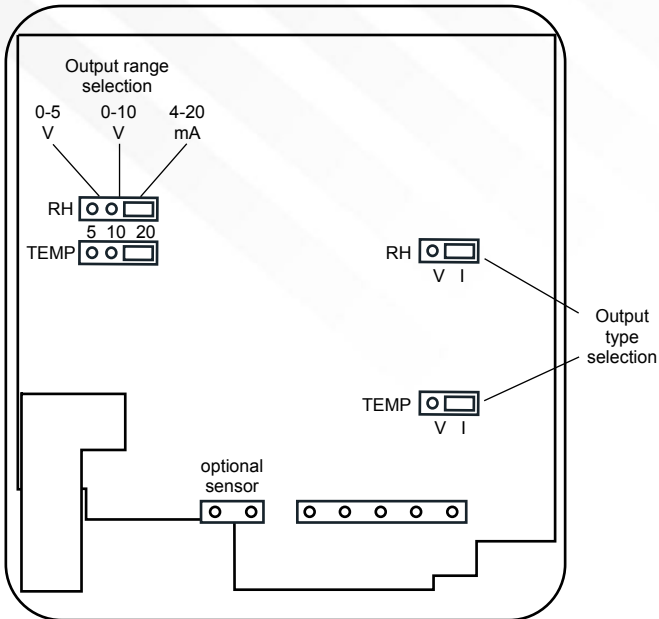

## Dimensions

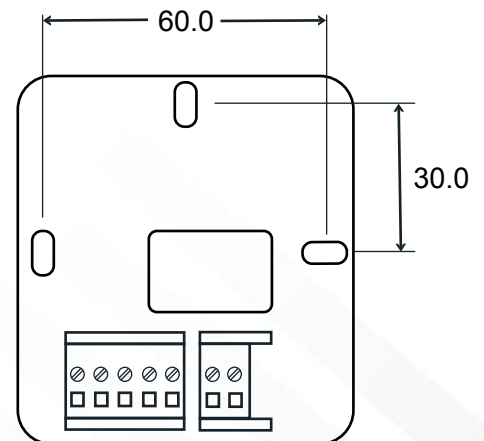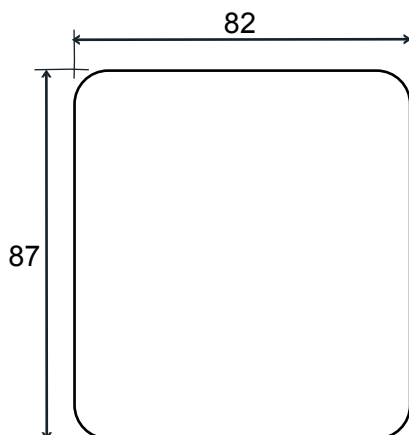

Every effort has been taken in the production of this data sheet to ensure accuracy. Axio do not accept responsibility for any damage, expense, injury, loss or consequential loss resulting from any errors or omissions. Axio has a policy of continuous improvement and reserves the right to change this specification without notice.

© Copyright Annicom 2017. All Rights Reserved