

Fire Damper Actuator, Spring Return & Aux Sw, 5Nm

Product Overview

The AX-RAF-05D Fire Damper Actuators are designed for fire and smoke dampers in ventilation and air-conditioning systems. These 24Vac/dc & 230Vac operated actuators comes with two default auxiliary SPDT switches and an optional thermal switch which operates at 72°C.



Products Features

- Square shaft : Max 12x12 mm
- Control: On/Off
- Two auxiliary switches
- Optional thermal switch

Product Specifications

Torque:	5Nm
Damper size:	1m ²
Running time	Less than 70s . Spring reset time <20s
Power supply:	AC/DC 24V @ 50/60Hz or AC 100-240V @ 50/60Hz
Nominal voltage range:	24Vac (AC/DC 19.2V-28.8V), 230Vac (AC 85V-265V)
Power consumption:	Runtime: 5W, Idle:3W
Angle of rotation:	95° max (5° per step)
Angle limit:	5° to 80°
Direction:	Selectable by mounting L/R
Position indication:	Mechanical, with dial
Manual override available:	Yes
Auxiliary switch:	2x SPDT
Auxiliary switch rating:	1mA...3(1.5)A, AC220V
Sound power level, motor:	45dB (A)
Sound power level, spring return:	62dB (A)
Ingress protection:	IP54
Protection class:	S: III (Safety low voltage), ST: II (Complete insulated)
Ambient humidity:	95 % RH, Non Condensing (EN60730-1)
Ambient temperature:	-20°C to 50°C (-4°F to 122°F) IEC 721-3-3
Storage temperature:	-30°C to 80°C (-22°F to 176°F) IEC 721-3-2
Thermal temperature switch (optional):	Cut-off at 72°C (Ambient & Duct)
Weight:	<2.0 Kg
Compliance:	CE
Country Of Origin:	UK

Order Codes


Part Number	Description
AX-RAF-05DS	Fire damper actuator, spring return, 5Nm, 2x SPDT Aux switches
AX-RAF-05DST	Fire damper actuator, spring return, 5Nm, 2x SPDT Aux switches , Thermal switch
* Add suffix “-230” for 230Vac versions	

AX-RAF-05D





Fire Damper Actuator, Spring Return & Aux Sw, 5Nm

Dimensions (mm)

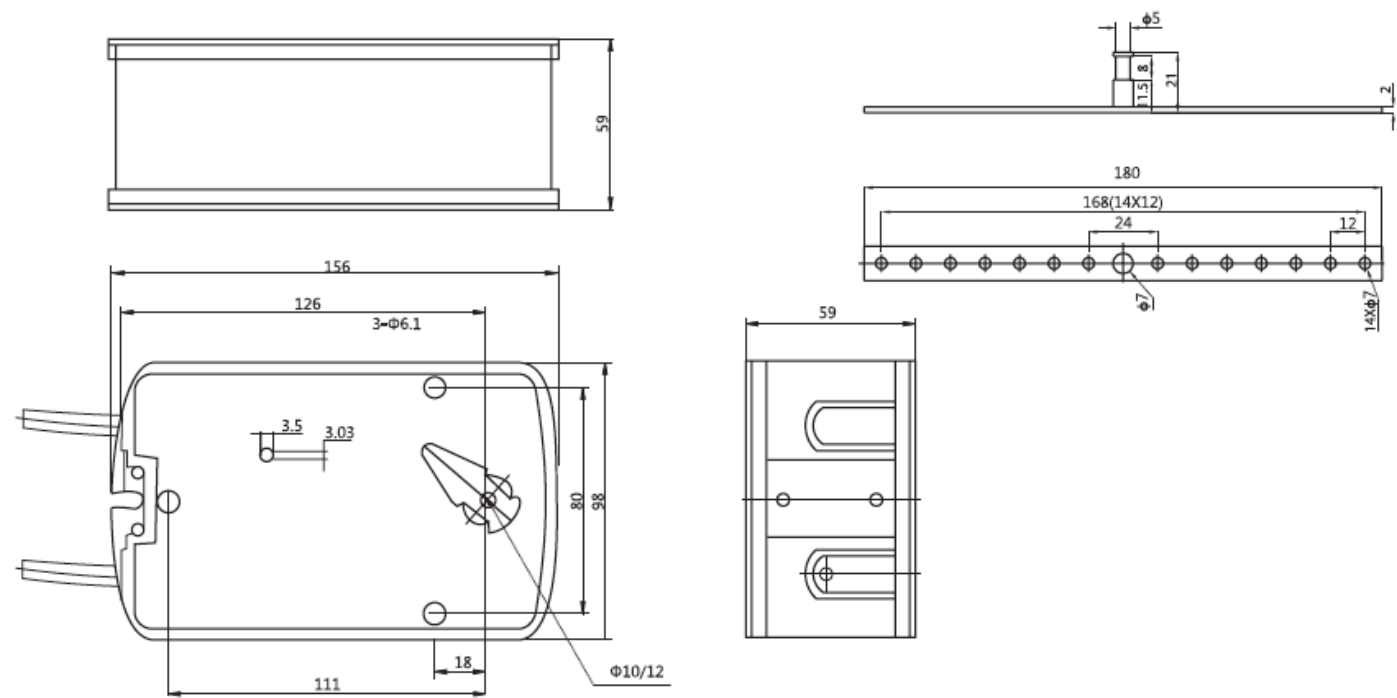

Wiring Diagram

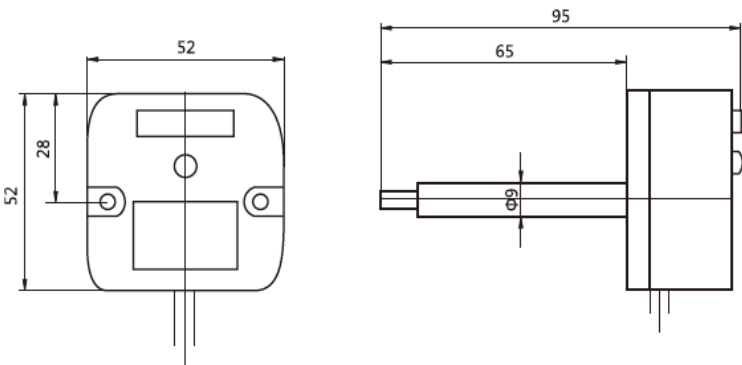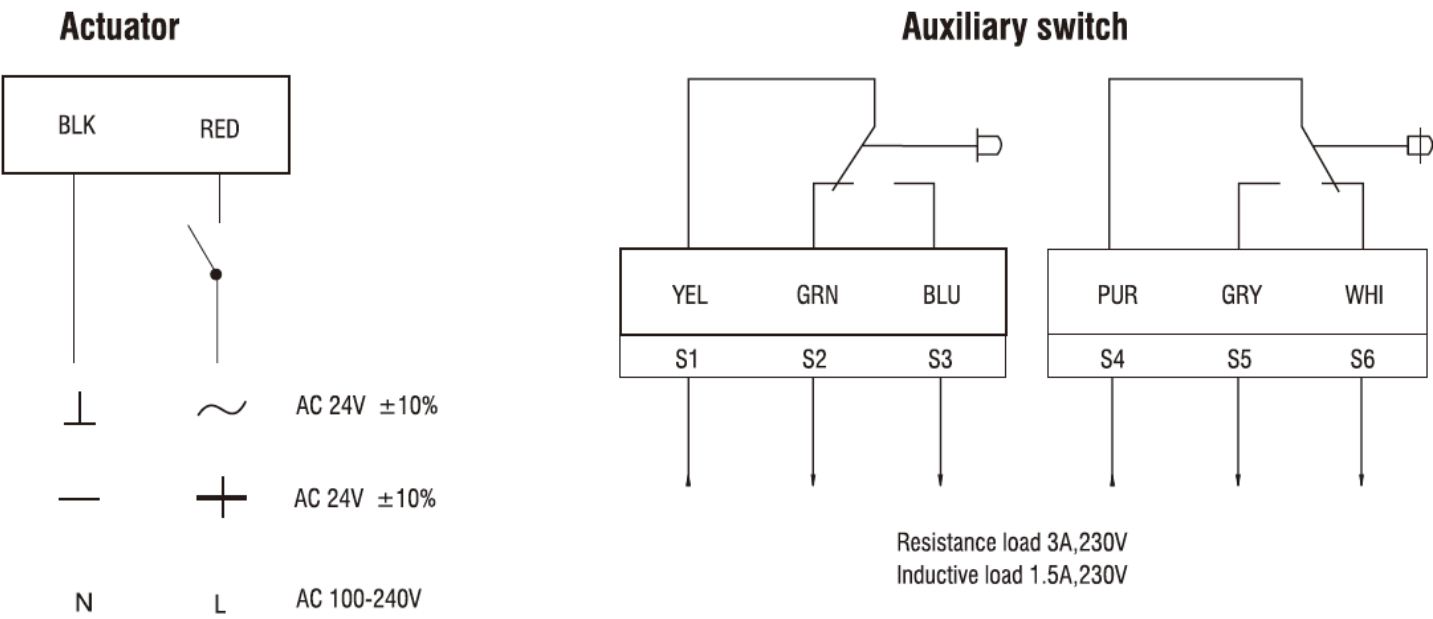

Operation

When power is applied, the actuator moves the damper at the same time as tensioning the return spring. It returns to the safety position by spring energy when the supply voltage is interrupted.

Plug the handle into the hexagonal hole. Move the handle in the direction of the arrow icon slowly. The output shaft and pointer will start rotating. After moving to the required position, rotate the lock knob towards the lock icon to lock the output shaft. To unlock, rotate the lock knob in the opposite direction.

DO NOT operate it manually when the spring is returning. It could cause mechanical damage.

Datasheet Contents

Every effort has been taken in the production of this data sheet to ensure accuracy. Annicom do not accept responsibility for any damage, expense, injury, loss or consequential loss resulting from any errors or omissions. Annicom has a policy of continuous improvement and reserves the right to change this specification without notice.